

SOMFY PROGRAMMING GUIDE

QUICK PROGRAMMING GUIDE FOR THE FOLLOWING RTS MOTORS

- CT32 CORD LIFT WIREFREE •LT30 ROLL UP WIREFREE •ST30 SONESSE 30 •ST40 SONESSE 40
- ALTUS 40 •ST50 SONESSE 50 •ALTUS 50 •ALTUS 60

FACTORY MODE



BEFORE YOU BEGIN

Motors are shipped in FACTORY MODE without limit settings and transmitter Id's. Power must ONLY be connected to current window covering being programmed. All other window coverings must be disconnected from their respective power while programming.



Note - If motor is 120V AC hardwired and cannot be disconnected, please contact an electrician prior to calling Somfy customer service for assistance.

Connect Power To Motor

With the motor installed in window covering, connect power to the motor (120V AC, or 12V DC or 24V DC transformer or 12V battery wand).

PROGRAMMING MODE



While programming, window covering should not be inactive for longer than 2 minutes or motor will exit PROGRAMMING MODE.

Initiate Programming

On the transmitter, press and hold both the UP  and DOWN  simultaneously until the window covering jogs. A jog is a brief up and down or in and out motion. In PROGRAMMING MODE, the window covering will move only when the  UP or DOWN  is held (or momentary fashion).



SUN CONTROL
RETRACTABLE SHADES
America's Shade Experts

Toll Free 877-792-1775 | Fax 877-792-0031
swsuncontrolpro.com | sales@swsuncontrol.com